

V9.1

BLAST HOME™

**INSTALLATION INSTRUCTIONS  
FOR:  
Finials**

Pair with Signature Collection Curtain Rod Sets

**Note:** Please save or responsibly recycle unused zinc metal end caps which were included with your rod sets.

**PARTS INCLUDED:**


Styles vary



Allen wrench



Small hex screw




Finial

Tools needed: Ladder


NOTE: A hex screw can run away, so we've included one extra each!

1

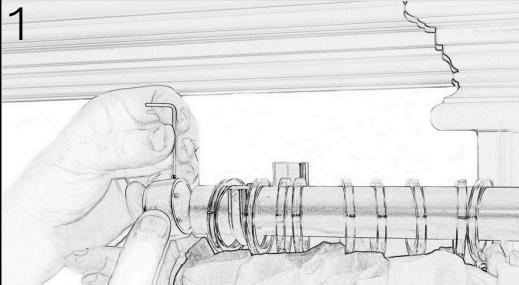


Begin by loosening small hex screw from end cap on curtain rod and remove.

2

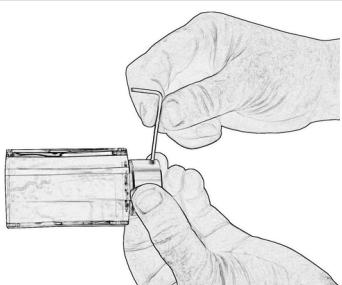

Use allen wrench to insert small hex screw into finial collar location.

3

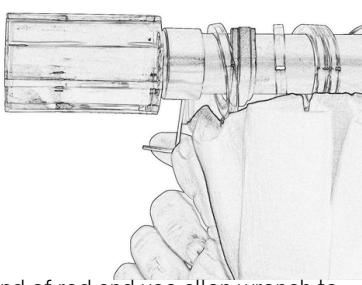

Hold finial on end of rod and use allen wrench to tighten small hex screw and secure finial on rod.

4



Repeat on other side and enjoy :)



**TIP:** We recommend holding the allen wrench vertically (as shown in the "parts included" section) and then putting the hex screw on top for easy handling and insertion into finial collar.